创明窗帘电机驱动说明

硬件连接

窗帘电机可以通过两种方式连接:

1. 直接通过 485 连接入主机的 232 数据接口,再在驱动连接中配置即可。

2. 通过 IP 转 485 模块通过网络接入主机系统, 在配置驱动时还将配置模块, 模块的串口 设置:

3. Baud rate	Start bit	Data bit	Stop bit	Parity
9600	1	8	1	none

端口号 50005

驱动安装配置

1.驱动安装

在 Composer 搜索栏中输入 wintom, 将会查找出下列两个驱动:

Locations	Discovered	My Drivers	Searc
Locations	Discovered	My Drivers	Jearc
wintom			
🖌 Local 🗧	Online 🗌]Certified	Only
Category:			
— All Cate	egories —		
Туре:			
- All Type	25 —		
Manufacture	er:		
- All Manu	ifacturers -	_	
Control Met	hod All Met	hods 🗸 S	ort: ¦el
Deocean	Wintom D	Blind	
•			
Deocean	2018/	12/24 16:37	
Deocean Deocean	2018/2	12/24 16:37 Gateway	
Deocean Deocean Deocean	2018/ Wintom (2018/	12/24 16:37 Gateway 12/24 16:34	
Deocean Deocean Deocean Window	2018/ Wintom (2018/ Contact (12/24 16:37 Gateway 12/24 16:34 Sensor	
Deocean Deocean Deocean Window Generic	2018/ Wintom (2018/ Contact (2014/	12/24 16:37 Gateway 12/24 16:34 Sensor 12/17 16:23	
Deocean Deocean Deocean Window Generic Microso	2018/ Wintom (2018/ Contact (2014/ ft Window	12/24 16:37 Gateway 12/24 16:34 Sensor 12/17 16:23 ws Media	Cente
Deocean Deocean Deocean Window Generic Microso Microsoft	2018/ Wintom (2018/ Contact (2014/ ft Window 2010/	12/24 16:37 Gateway 12/24 16:34 Sensor 12/17 16:23 ws Media 3/5 15:50	Center
Deocean Deocean Deocean Window Generic Microso Microsoft InHome	2018/ Wintom (2018/ Contact (2014/ ft Windor 2010/ Heavy Du	12/24 16:37 Gateway 12/24 16:34 Sensor 12/17 16:23 ws Media 3/5 15:50 ty Power	Center

添加驱动后在 Blind 驱动中要做如下的配置: Activation Key:需要我司授权 Device ID 配置设备的 ID

Advanced Properties		
Properties Actions Documentation Lua		
Activation Key	811be136c0931e02059850eedcb0b3ddbce9af32	
Activation Status	Activated. Current Version is: V0.0.1	
Debug Mode	Print and Log	×
Control4 MAC Address	000FFF51312C	
Device ID	02	v
Reversal	Off	<u> ۲</u>
Use Levels	Off	~
Version	V0.0.1	

网络配置:

Connections		IP Network Connections						
Control/AV	Network	Identify Disconnect						
Network								
3ee Network		Device		Room	Type	Address Type	Address	IP Address
ave Network		- CA-1		Room	cá: con	1000	e4: control4	192 168 9 65
		Descea	n Wintom Gateway	Boom	c4:lua	TP	192, 168, 9, 201	192, 168, 9, 201
		Deocea	n SicooTouch Gateway	Room	c4:av_ge	n IP		
				rks	Cause identification sent from the Device controlled by this drive Type the network addre below.	:o be ver or ISS		
					192 166 9.	201	Disconnect	
					< Previous	Next >	Close	

连接:

网关驱动和电机驱动正常会自动连接链接方式如下

Deocean Wintom Blind				
Name	Туре	Connection	Input/Output	Connected To
Control Inputs				
🖨 Blind Group	Control	BLIND GROUP	Input	
🗩 Wintom Bus	Control	DEOCEAN_WINTOM_BUS	Input	Deocean Wintom Gateway->Wintom Bus
📟 Serial RS-232	Control	RS_232	Input	
Control Outputs				
🗖 Open Button Link	Control	BUTTON_LINK	Output	
🔲 Close Button Link	Control	BUTTON_LINK	Output	
🛅 Toggle Button Link	Control	BUTTON_LINK	Output	
🔲 Stop Button Link	Control	BUTTON_LINK	Output	

设备设置

学码键图示:



 写入创明众联 B 产品协议: 再持续按下电机学码 3s 后,待窗帘电机指示灯常亮按下图驱动中的按钮

dvanced Properties				
Properties	Actions	Documentation	Lua	
写入创	明B产品协	й		

2. 写入设备 ID

再持续按下电机学码 3s 后,设置 Device ID,电机 set 后则设置入设备

Properties Actions Documentation Lua		
Activation Key	811be136c0931e02059850eedcb0b3ddbce9af32	
Activation Status	Activated. Current Version is: V0.0.1	
Debug Mode	Print and Log v	
Control4 MAC Address	000FFF51312C	
Device ID	02] v	Set Cancel
Reversal	Oll ^	
Use Levels	Off ~	
Version	V0.0.1	
Version	V0.0.1	
Version	V0.0.1	